

How to apply the Alucast seal

The Alucast seal is available with or without an integrated galvanised iron wire. In the version without an integrated wire, the seals can be used in combination with a copper, galvanised iron or plastic wire, or Hemp String (see Accessories). Both versions of the Alucast seal are closed by using a Seal Nipper (see Tools).

-
- 1 To fasten the Alucast seal, feed the wire or string through the apertures of the item to be sealed (not shown). Then thread the ends of the wire or string through the small holes in the seal body. When using the Alucast with integrated wire, push the wire through the apertures of the item to be sealed and then through the opening in the seal body.



-
- 2 Insert the Alucast seal into the Seal Nipper and press the pliers firmly together.

