## How to apply Tacho Seal BP 140-PK and BP 140-XL PK

Carefully apply the Tachometer Seal to ensure its' correct function. Once applied, make sure the label is clearly visible. The seal should be fixed as close as possible to the sealing point of the sensor.

- 1. Thread the wire through the sealing point on the sensor and arround the appropriate location on the vehicle gearbox.
- 2. Insert the end of the wire into the hole of the seal and pull the wire through, forming a loop.
- 3. Turn the twist wing of the seal at least **four turns clockwise** until the wire is **tight**.
- 4. Press the lateral slider, which makes further turns of the twister wing impossible and locks the seal.
- 5. Break off the twist wing of the seal.















Bednorz GmbH & Co. KG Am Aspenhaag 5 D - 65451 Kelsterbach www.bednorz.com

Fon: +49 (0) 6107 - 60 33 Fax: +49 (0) 6107 - 62 49 7 Mail: info@bednorz.com